

# RS SVD INCOMPLETE DISASSEMBLY CHART



Open the scope release latch backward, and then take down the scope.



Press the magazine release catch, and remove the magazine.



Untie the cheek piece button, and remove the cheek piece.



Rotate the handguard catch button 180° clockwise



Push the handguard block forward.



Take down the left and right handguard, and take out the battery



Move the receiver cover pin clockwise to backstop point.



Open the receiver cover and then remove it.




Loosen the adapter of holding lever by hexagon wrench.



Pull it backward, remove holding lever and spring, and then take down the cocking lever.



Loosen the hop-up fixed screws anticlockwise, and then take them down.

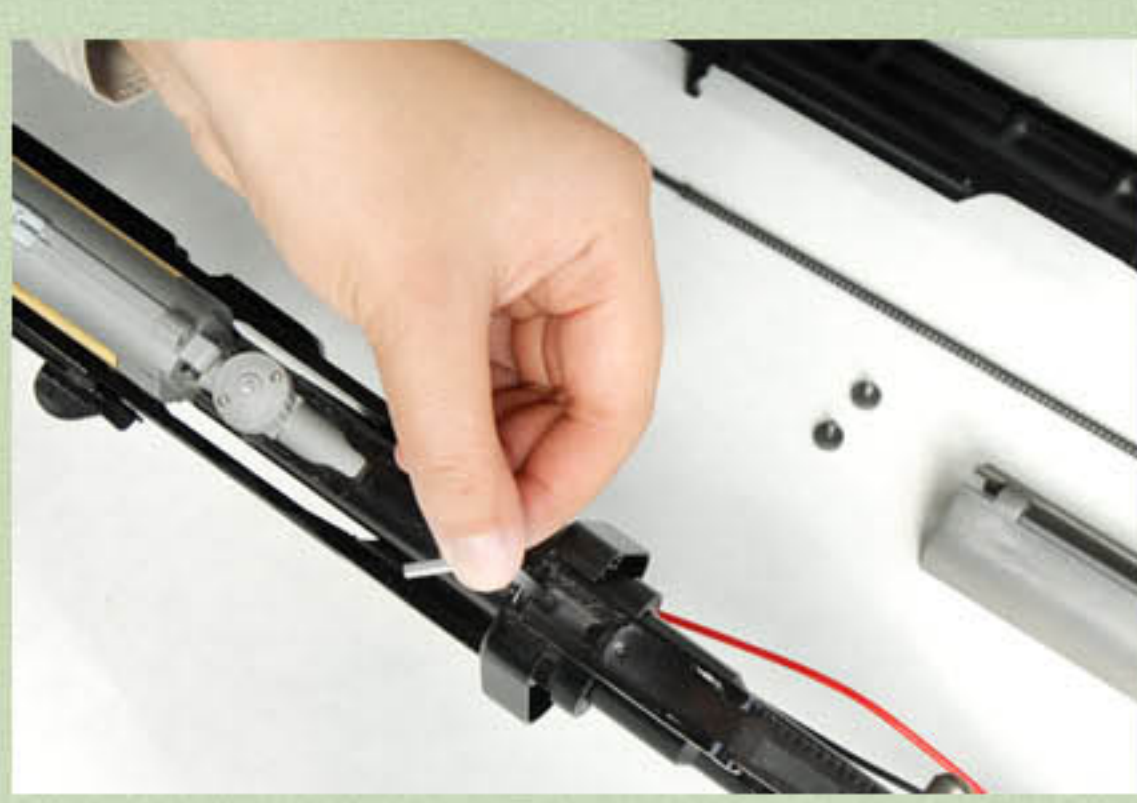


Loosen the barrel fixed screws.



Take down outer barrel.



Pull out inner barrel backward.

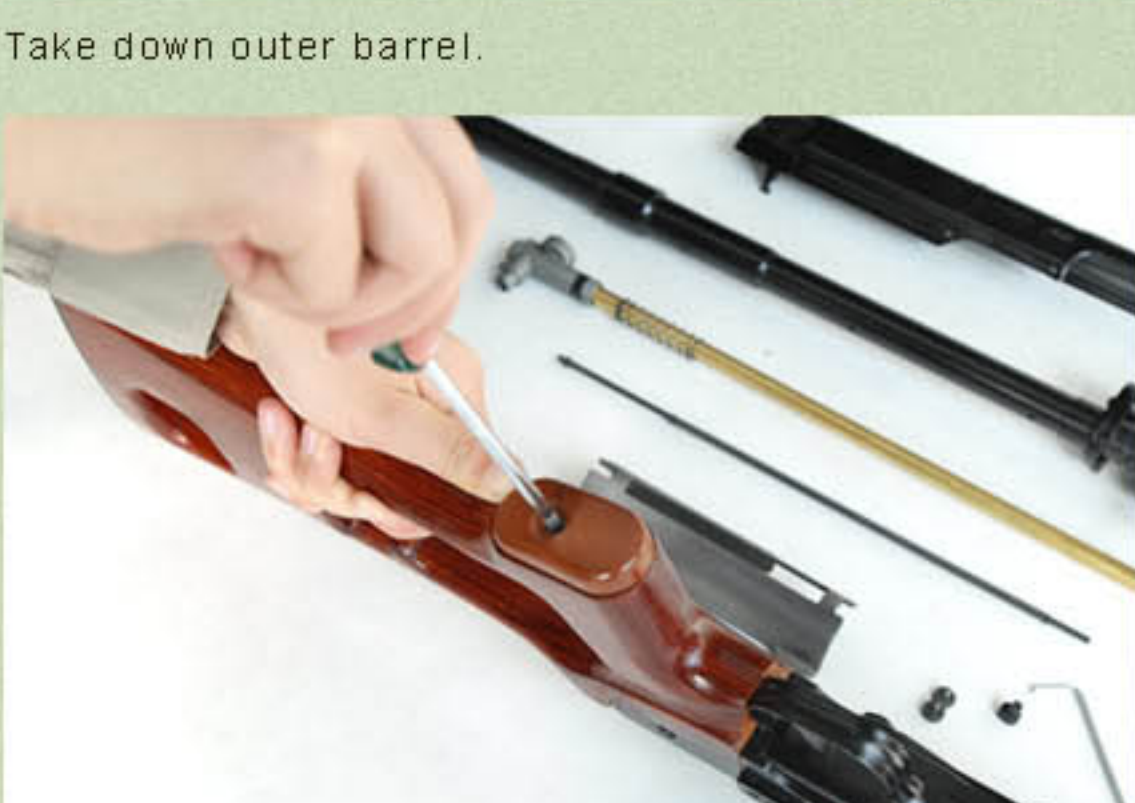

Remove the screw of the grip cover, and then take the grip down.



Rotate the receiver cover pin anticlockwise.




Take the receiver cover pin down.



Rotate the selector lever 90° anticlockwise, and then take it down.



Loosen the gearbox fixed screw.

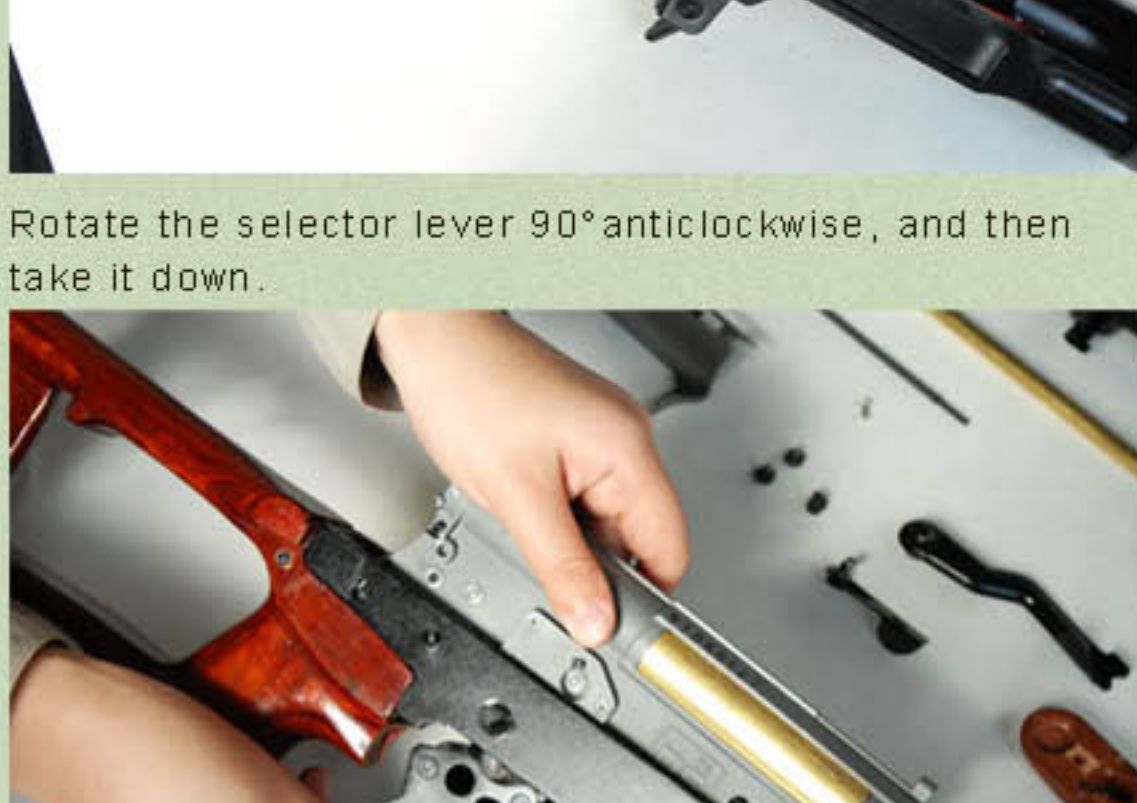

Horizontally pull out the gearbox and remove the trigger guard set at the same time.

